



Level Controller Adjustment Models – BTMIDI - 2A / 3A



Warning - mains voltage – isolate before electrical maintenance

Isolate electrical power before adjusting.

This is for units where the solenoid is slow shutting off and may cause some overflow through the internal overflow pipes. This covers models up to and including serial No. MD485

The level control will be set as shown with the arrow on the top control knob pointing to the UP LS setting as shown in image 1.

Use a screw driver to turn the control knob up one setting to UP ST as shown in image 2 this will give a much faster cut of on the solenoid.

Reconnect electrical power.



Image 1



Image 2